









List of pictograms used

	Read the instructions!		Electric shock warning! Danger to life!
	Observe the warnings and safety instructions!		Danger of explosion!
	Danger to life and risk of accidents for infants and children!		Wear safety gloves!
	For your safety		Dispose of the packaging and device in an environmentally friendly manner!

LED table lamp with clock

● Introduction



Congratulations on the purchase of your new device. You have selected a high quality product. Please be sure to read the complete operating instructions carefully. These instructions are part of the product and contain important information on setup and handling. Always follow all safety instructions. Before using this product for the first time verify the correct voltage and that all parts are properly installed. If you have any questions or are unsure about operating the product, please contact the dealer or service centre. Please keep these instructions in a safe place and pass them on to third parties as applicable.

● Intended use

This lamp is only suitable for indoor use in dry and enclosed spaces. This device is intended for private household use only.

● Delivery contents

Check that all the parts are present and that the device is in perfect condition immediately after unpacking.

- 1 LED table lamp with clock
- 1 Battery, type CR2032
- 1 Micro-USB cable
- 1 Instructions for use

● Parts description

- 1 LC display
- 2 ON/OFF button (for LC display) (touch button)
- 3 ON/OFF button (for lamp) (touch button)
- 4 Lamp base
- 5 USB port
- 6 Lamp arm
- 7 Time / alarm display
- 8 Calendar display
- 9 Weekday display
- 10 Temperature display
- 11 Mode button
- 12 Set button
- 13 Up button
- 14 Down button
- 15 Battery compartment

● Technical data

Connector:	USB A (5V/2A)
Illuminants:	18 x LED (non-replaceable)
Life:	20,000 hours
Battery:	1 Button cell, type CR2032

Dimensions:	∅ Lamp base: 90 mm
	Upper lamp arm: 192 x 40 x 12,5 mm
	Height with horizontal arm: 260 mm
	Height with extended arm: 430 mm
Material:	Plastic (metal in the lamp base)

● Safety



Safety instructions

Damage due to failure to comply with these instructions for use will void the warranty! We assume no liability for consequential damages! We assume no liability for property damage or personal injury due to improper handling or failure to observe the safety instructions!

■  **⚠ WARNING! DANGER TO LIFE AND RISK OF ACCIDENTS FOR INFANTS AND CHILDREN!**

Never leave children alone and unsupervised with the packaging material. The packaging material poses a suffocation hazard. Children frequently underestimate the dangers. Always keep children away from the product. This product is not a toy.

- This device may be used by children aged 8 years and up, as well as by persons with reduced physical, sensory or mental capacities, or lacking experience and/or knowledge, so long as they are supervised or instructed in the safe use of the device and understand the associated risks. Do not allow children to play with the device. Cleaning and user maintenance must not be performed by children without supervision.



Avoid the risk of fatal injury from electric shock

- Check the lamp for possible damage before every use. Never use the lamp if it shows any signs of damage.

⚠ WARNING! A damaged lamp means danger of death from electric shock. In the event of damage, repairs or other problems with the lamp, please contact the service centre or an electrician.

- To avoid hazards, if the external flexible lead on this lamp is damaged it must be replaced by the manufacturer, their service representative or an equivalent professional!
- Ensure before use that the available mains voltage is the same as the voltage required for operating the lamp.
- Never allow the lamp to come into contact with water or other liquids.
- Never open any of the electrical equipment or insert objects into these. This will pose the risk of fatal injury from electric shock.
- The illuminant is not replaceable.
- To avoid hazards, if the illuminant is damaged it must be replaced by the manufacturer, their service representative or an equivalent professional.
- This lamp is not suitable for dimmers or electronic switches.



Preventing fire and injury hazards

- Do not look directly into the light source (illuminant, LED etc.).
- To prevent burns, be sure the lamp is switched off and cooled down before touching it. Illuminants become very hot.
- Do not cover the lamp with objects. Excessive heat build-up can result in fire.
- Do not operate the lamp unattended.



For your safety

- Install the lamp so that it is protected from moisture and dirt.
- Always be attentive! Always pay attention to what you are doing and use common sense.
- Never install the lamp if you are having difficulty concentrating or do not feel well.



Safety instructions for batteries / rechargeable batteries

⚠ WARNING! KEEP BATTERIES OUT OF THE REACH OF CHILDREN! Swallowing batteries can cause chemical burns, perforation of soft tissue, and death. Severe burns may occur within 2 hours of swallowing batteries. Seek immediate medical attention.

■ **DANGER TO LIFE!** Keep batteries / rechargeable batteries out of reach of children. If accidentally swallowed seek immediate medical attention.



DANGER OF EXPLOSION!

Never recharge non-rechargeable batteries. Do not short-circuit batteries /

rechargeable batteries and / or open them. Overheating, fire or bursting can be the result.

■ Never throw batteries / rechargeable batteries into fire or water.

■ Do not exert mechanical loads to batteries / rechargeable batteries.

Risk of leakage of batteries / rechargeable batteries

■ Avoid extreme environmental conditions and temperatures, which could affect batteries / rechargeable batteries, e.g. radiators / direct sunlight.

■ If batteries / rechargeable batteries have leaked, avoid contact with skin, eyes and mucous membranes with the chemicals! Flush immediately the affected areas with fresh water and seek medical attention!



WEAR PROTECTIVE GLOVES!

Leaked or damaged batteries / rechargeable batteries can cause burns on contact with the skin. Wear suitable protective gloves at all times if such an event occurs.

■ In the event of a leakage of batteries / rechargeable batteries, immediately remove them from the product to prevent damage.

■ Only use the same type of batteries / rechargeable batteries. Do not mix used and new batteries / rechargeable batteries.

■ Remove batteries / rechargeable batteries if the product will not be used for a longer period.

Risk of damage of the product

■ Only use the specified type of battery / rechargeable battery!

■ Insert batteries / rechargeable batteries according to polarity marks (+) and (-) on the battery / rechargeable battery and the product.

■ Clean the contacts on the battery / rechargeable battery and in the battery compartment before inserting!

■ Remove exhausted batteries from the product immediately.

■ This product has a built-in rechargeable battery which cannot be replaced. When disposing of the product, you must indicate this product contains a rechargeable battery.

● **Set-up**

Note: Remove all packaging material from the product.

□ Place the lamp on a flat surface with its back side facing you. You have the option of using the lamp battery operated or USB operated:

Battery operation:

□ Remove the insulating stripes from the battery compartment **15** on the reverse side of the lamp before first use. A melody will sound.

USB Operation:

□ Charge the lamp before first use by inserting one end of the USB cable into the USB port **5** and inserting the other end of the USB cable into the USB interface on the computer or a USB adapter.

● Adjusting the lamp

Note: Only change the alignment of the lamp when it is switched off. You can adjust the lamp to the lighting conditions you require.

- Move the lamp arm [6] at an angle of 180° (see Fig. B).

● Switching the lamp on/off and dimming

- Switch the lamp on or off using the ON/OFF button [3] on the lamp base [4]. All you need to do here is press it with your finger (touch button).
- You can dim the lamp in three stages. The brightest stage is activated automatically when you switch on the lamp. You can dim the brightness using the ON/OFF button [3] on the lamp base [4].

● Switching the LC display on/off

- Switch the lighting on the LC display [1] on and off using the ON/OFF button [2] on the lamp base [4]. All you need to do here is press it with your finger (touch button).

● Functions

Time mode:

Displays time, date, week, temperature; 12/24 hour format (AM = morning, PM = evening)

Alarm/snooze mode:

Set the alarm time and select alarm signals; snooze function can also be operated at the same time

Birthday reminder mode:

Set the time and date of a birthday; a song will play on the selected day

Timer mode:


Set time will be counted down

Temperature mode:

Automatic display of the current temperature: using the set button [12] you can select either °C or °F.

● Settings


- Press the mode button [11] to switch between different functions:

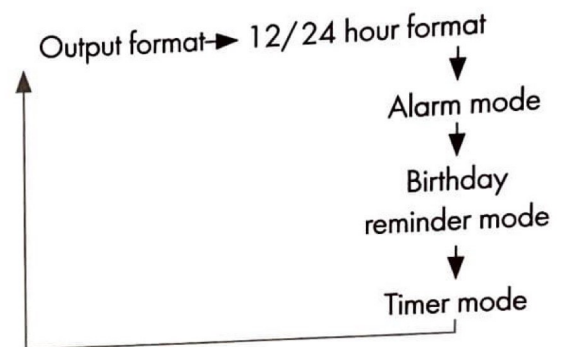

Note: If no button has been pressed for one minute, the LC display [1] returns to the output format.

● Time mode / 12/24 hour clock

- Press the mode button [11] to configure the 12/24 hour format.
- Press the set button [12] to set the desired format using the up button [13] or down button [14]. Press the set button [12] once more to confirm your entry. Enter the information in the following order:

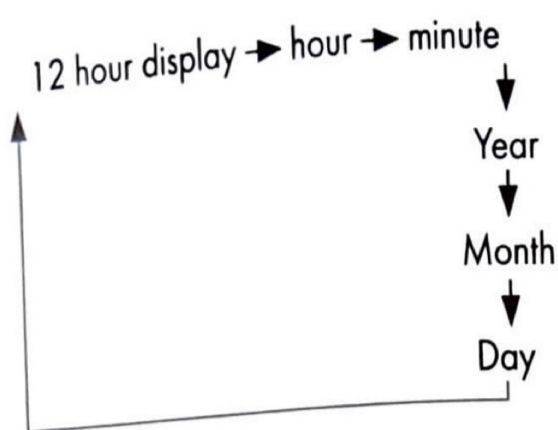

- The following adjustment range is available: years between 2008 and 2099, months between 1 and 12, days between 1 and 31, hours between 1 and 12 or 0 and 23, minutes between 0 and 59. When setting the hours and minutes the seconds are automatically deleted. The week will change automatically when the date has been set.
- Press the mode button [11] in the output format to configure the 12/24 hour format. Press the up button [13] or down button [14] to set the desired format.

● Alarm / snooze mode

- Press the up button [13] in the output format to activate the snooze function. Press the up button [13] again to deactivate the snooze function.
- Press the mode button [11] twice in the output format to configure the alarm / snooze mode.
- Press the set button [12] to set the desired time and alarm melody or alarm tone using the up button [13] or down button [14].
- Note:** You have the option of switching between 7 alarm melodies and 2 alarm tones.
- Press the set button [12] again to confirm your entry. Enter the information in the following order:
Hours → minutes → music
- When the alarm sounds press any button to end the alarm. If the snooze function has been activated, then the alarm will sound four times and the snooze display will flash in the LC display [1]. Press the up button [13] to deactivate the snooze function. The snooze display will disappear.
- Press the mode button [11] twice in the output format to configure the alarm / snooze mode.

- Press the set button [12] twice to deactivate the alarm.

● Birthday reminder mode

- Press the mode button [11] three times in the output format to configure the birthday reminder mode.
- Press the set button [12] to set the desired date using the up button [13] or down button [14].
- Press the set button [12] again to confirm your entry.
Enter the information in the following order:
hour → minute → year → month → day
- On the birthday „Happy Birthday“ will be played for 5 minutes. You can stop playback of the song by pressing any button.

● Timer mode

- Press the mode button [11] four times in the output format to configure the timer mode.
- Press the set button [12] to set the desired time using the up button [13] or down button [14].
- Press the set button [12] again to confirm your entry.
The timer will begin (countdown from the set time).
Enter the information in the following order:
hour → minute → time interval
- The following adjustment range is available: hours between 0 and 23, minutes between 0 and 59.
- When the set time has expired, a melody will sound. To end the melody press any button.

● Temperature mode

- Press the set button [12] in the output format to switch between °C and °F.

● Music playback

- Press the down button **14** in the output format to play back music. You can choose between seven songs.

● Changing the battery

- Open the battery compartment **15** by turning the battery cap anticlockwise using a coin.
- Remove the old battery and replace this with a new battery (see „Technical Data“). Please note the polarity when inserting the battery. This is indicated in the battery compartment **15**. A melody will sound. To end the melody press any button.
- Turn the battery cap clockwise onto the battery compartment **15** using a coin to close it.

● Maintenance and cleaning

⚠ WARNING! DANGER OF ELECTRIC SHOCK! For electrical safety, never clean the lamp with water or other liquids, nor immerse it in water.

⚠ CAUTION! RISK OF BURNS! Allow the lamp to cool down completely.

- Do not use solvents, petrol, etc. Otherwise the lamp will be damaged.
- Only clean with a dry, lint-free cloth.

● Disposal

The packaging is made entirely of recyclable materials, which you may dispose of at local recycling facilities.



Observe the marking of the packaging materials for waste separation, which are marked with abbreviations (a) and numbers (b) with following meaning:
1-7: plastics / 20-22: paper and fibre-board / 80-98: composite materials.



The product and packaging materials are recyclable, dispose of it separately for better waste treatment. The Triman logo is valid in France only.



Contact your local refuse disposal authority for more details of how to dispose of your worn-out product.



To help protect the environment, please dispose of the product properly when it has reached the end of its useful life and not in the household waste. Information on collection points and their opening hours can be obtained from your local authority.

Faulty or used batteries / rechargeable batteries must be recycled in accordance with Directive 2006/66/EC and its amendments. Please return the batteries / rechargeable batteries and / or the product to the available collection points.



Environmental damage through incorrect disposal of the batteries / rechargeable batteries!

Batteries / rechargeable batteries may not be disposed of with the usual domestic waste. They may contain toxic heavy metals and are subject to hazardous waste treatment rules and regulations. The chemical symbols for heavy metals are as follows: Cd = cadmium, Hg = mercury, Pb = lead. That is why you should dispose of used batteries / rechargeable batteries at a local collection point.

● Information/Warranty

● Warranty

You have a 36 month warranty on this device, valid from the date of purchase. This device has been manufactured with care under strict quality control. During the warranty period we will remedy any defects in material or manufacture free of charge. In the event of a defect arising during the